



suparule



Sensorform EFI-BFZ-50

Earth Fault Indicator with Battery Operated Timer

- Powered from 3.6V ½ AA Lithium Battery
- Mechanical Flag indicator.
- Automatic reset of fault via user selectable 4 or 8 hour period.
- Manual reset of fault by Test/Reset button on the front panel.
- LED Remote indicator (optional)
- Aux. Relay contact for remote alarm generation (optional)

DESCRIPTION

Sensorform EFI-BFZ-50 is one of a family of Earth Fault Indicator products that are designed to assist in the rapid location and isolation of faults on high voltage networks (1-36kV) in single-sided feed or open ring main systems. When an asymmetrical current greater than 50A in a 3 phase cable is detected an earth fault is indicated by means of a Mechanical Flag Indicator.

A current sensor is fixed around the three phases of the cable system being monitored and will detect a current imbalance due to an earth fault. An earth fault trip is indicated by a Mechanical Flag indicator on the unit together with a second LED based Remote Indicator (optional). An auxiliary relay contact is also provided as an optional extra for signaling an alarm to other systems. In an open ring network the path of the fault current from the feeding point to the fault location is marked by the triggered EFI's. The defective conductor segment is located between the last EFI that has been triggered and the first EFI which is still inactive.

FEATURES

- Powered from 3.6V ½ AA Lithium Battery
- Mechanical Flag indicator
- Automatic reset of fault state on user selectable 4hour or 8 hour period
- Manual reset of flashing LED by Test/Reset button on the front panel
- CT100 Current Sensor (standard)
- CT150 Current Sensor (optional)
- CT300 Current Sensor (optional)
- LED Remote indicator. (optional)
- Aux. Relay contact for remote alarm generation (optional)
- Rugged design suitable for outdoor use

Distributor:

SPECIFICATIONS

General

Power Source:	3.6V Lithium ½ AA 850mAH
Network Volt. Range:	1-36kV
Trip Current:	50A±10%
Primary Indication:	Mechanical Flag (RED)
Min. Fault Duration:	2.5 cycles
Manual Reset:	Push button on front panel
Automatic Timer Reset Period:	4 hour or 8 hour selectable
Manual Trip Test:	Push button on front panel
Operating Temp Range:	-40° C to +80°C
Operating Humidity Range:	0-100% RH
Dimensions:	115mm 65mm x 40mm
Degree of Protection:	IP65
Mass:	250g
Current Sensor Diameter:	Standard CT100: 100mm Optional CT150: 150mm Optional CT300: 300mm

Remote Indicator (optional)

Indication Method:	Flashing LED @1 Hz
Flashing Duration:	250 hours continuous flashing
Dimensions:	M12 Hex Bolt 50mm long
Automatic Timer Reset	Same as above

Auxiliary Relay (optional)

Type:	Latching, N/O on reset
Rating:	220VDC, 250VAC, 2A
Lead type:	2-core, 0.5mm² double Insulated
Warranty Period	2 Years

Suparule Systems Ltd.,
Suparule House,
Lonsdale Road,
National Technology Park,
Limerick, Ireland.

Ph.: +353 (0) 61 201030
Fax.: +353 (0) 61 330812
Email: info@suparule.com
Web: www.suparule.com