

Sensorform Earth Fault Indicator ordering information			
First Group	Product Range	EFI CFI	Earth Fault Indicator Cable Fault Indicator
Second Group	1 st Char: Power Source	M B C D S	Mains Powered Battery Powered CT Powered DC Powered Self-powered
	2 nd Char: Indicator Type	F L	Flag LED
	3 rd Char: Enclosure Type	Z P	IP65 ABS Enclosure Panel Mount Enclosure
Third Group	1 st Char: Remote indicator fitted 2 nd Char: Cable length in metres	R 3	Remote LED Indicator 3 meters
Fourth Group	1 st Char: Aux. Relay fitted 2 nd Char: Cable length in metres	A 2	Aux. Relay fitted 2 meters
Fifth Group	1 st Char: Power cable fitted	M P	Power cable Power CT cable
	2 nd Char: Cable length in metres	3	3 meters
Sixth Group	Nominal trip current in Amps (factory set)	50	50 Amps trip level
	User-selectable trip level	S	3 nominal trip levels to be specified at order, e.g. 40-80-120A
Seventh Group	1 st Five Char: Current Transformer (CT)	CT100	Up to 100 mm dia. (multi-core cables)
		CT150	Up to 150mm dia. (multi-core cables)
		CT300	300mm x 100mm (single-core cables)
	6&7 th Char: Cable length in metres	3	3 meters

For example:

EFI-MLZ-R2-A2-M3-50-CT150.3

Notes:

- The Remote Indicator & Aux. Relay are optional components.
- The product does not ship with any leads for the mains voltage input or the Aux. Relay output, unless stated at time of order.
- The unused cable-glands ship with a rubber stopper inserted to maintain sealing integrity.
- The product ships in a brown corrugated cardboard box.